


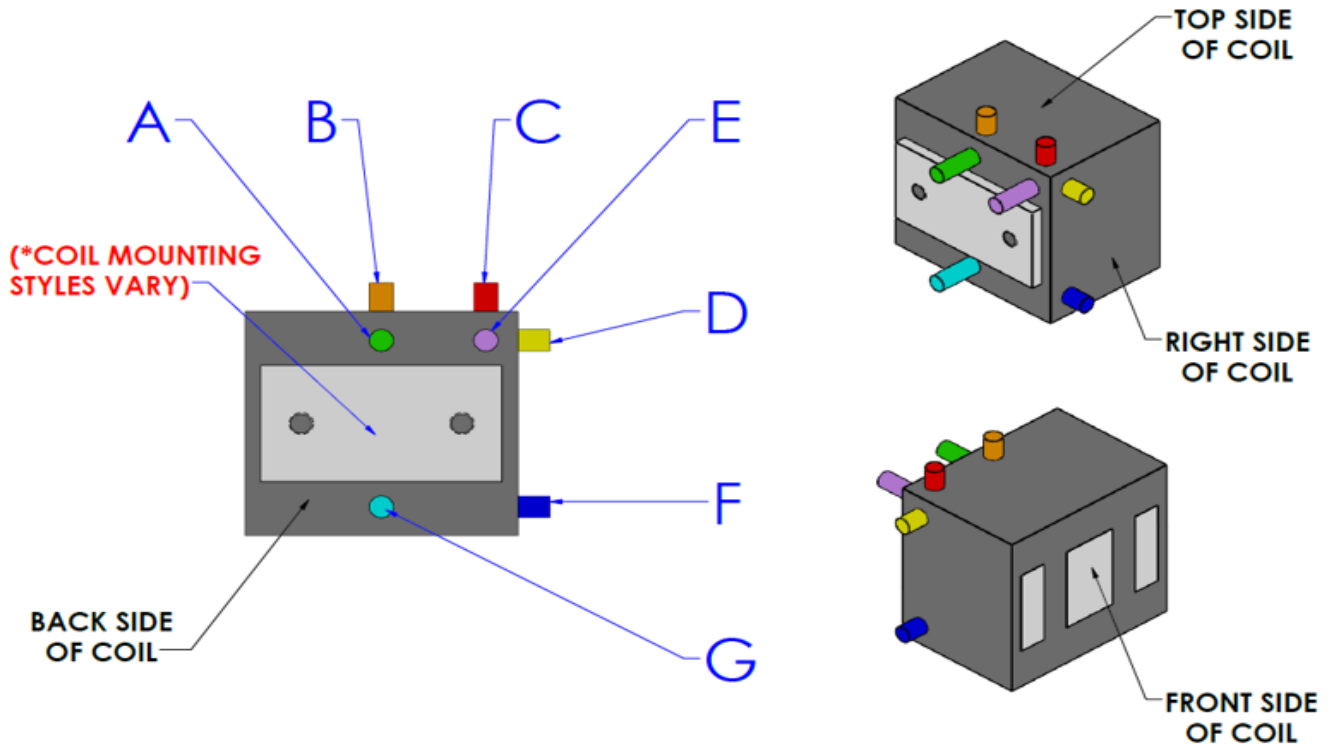

## COIL CORD OUTPUT LOCATIONS



A	B	C	D	E	F	G
V101	V101	V112	V101	V112	V102	V103H
V104	V103	V118T	V113	V113S	V103	V104H
V106					V106	
V106A					V106A	
V114					V109	
					V118	