


Piercy Machine Co.

Coil Cord Output Positions

Top view of coil

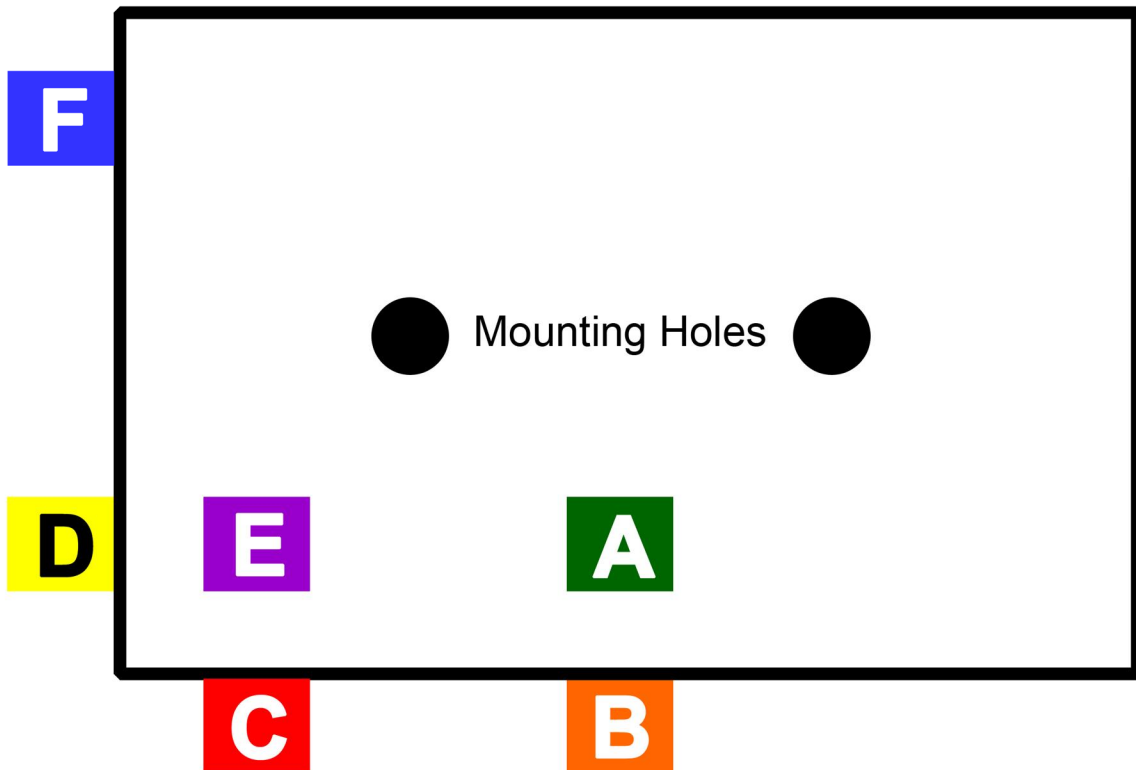

V101	V103	V112	V101	V113S	V109
V104	V103H	V118	V113		V102
V106	V104H				V103
V114					V106

Notes

- V101 can be placed in either A or D
- V106, V106A can be placed in either A or F
- V113S is a double slotted angle mount
- V103 can be placed in either B or F